

Series CTP Installation, Operation and Maintenance Manual, CTP-A(Percentage Timer Model)

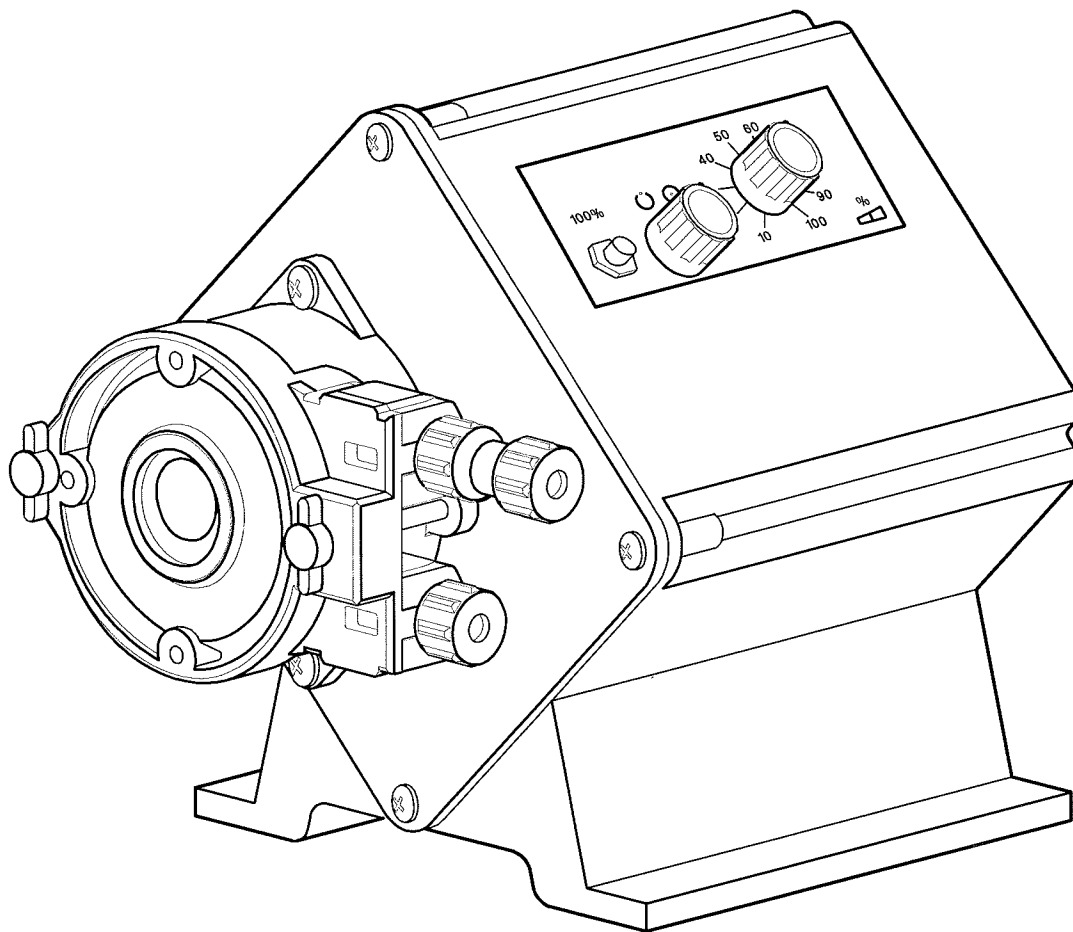

READ ALL WARNINGS CAREFULLY BEFORE
INSTALLING PUMP

Series CTP-A(Percentage Timer Model)

TABLE of CONTENTS

SAFETY INSTRUCTIONS	PAGE 3
TECHNICAL SPECIFICATIONS	PAGE 4
MATERIAL of CONSTRUCTION	PAGE 4
INSTALLATION	PAGE 4
OPERATION	PAGE 6
MAINTENANCE	PAGE 7
WIRE DIAGRAM	PAGE 9
ASSEMBLY DIAGRAM/PARTS LIST	PAGE 11

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS PRIOR TO USE


- *** **⚠ DANGER**: Secure chemicals & metering pumps, making them inaccessible to children & pets.
- *** **DO NOT PUMP FLAMMABLE LIQUIDS.**
- *** To reduce the risk of electrical shock-before maintenance, repair, or moving pump-disconnect power.
- *** Do not cut the plug or ground lug off the electrical cord. Consult a licensed electrician for proper installation.
- ** **⚠ WARNING**: Always wear protective clothing, including gloves and safety glasses, when working on or near chemical metering pumps, consult chemical manufacture for protective equipment recommendations.
- ** Inspect tubing regularly for cracking or deterioration and replace as necessary. **(Always wear protective clothing and safety glasses when inspecting tubing.)**
- ** **CAUTION: KEEP FINGERS AWAY FROM ROTATING PARTS.**
- ** If the pump is exposed to direct sunlight, use a U.V. resistant tubing.
- ** Follow directions and warnings provided with the chemical from the chemical manufacturer. The user is responsible for determining the chemical compatibility with the chemical feed pump.
- ** Make sure the voltage on the pump name tag matches the installation voltage. If pump fails to start, check line voltage.
- ** Consult with local health officials and/or qualified water conditioning specialists when treating potable water.
- ** Always depressurize system and drain chemical prior to installation or maintenance.
- ** If the injection point is lower than the chemical tank and pump, install an antisiphon valve.
- ** **DO NOT MODIFY PUMP**, as this poses a potentially dangerous situation and voids the warranty.
- * **⚠ CAUTION**: All pumps are factory tested with water. Remove tubing and thoroughly dry if the chemical being pumped will react with water(for example sulfuric acid).
- * Hand tighten plastic connections(**Do not use a wrench**).
- * Consult a licensed plumber and electrician before installation to conform to local codes.
- * **NOTE:** For accurate volume output, the pump must be calibrated under all operating conditions.

Technical Specifications

Electrical Rating:.....Refer to Name Plate.
 Feed Rate:.....Refer to Name Plate.
 Dimensions:.....Refer to Page #4
 Maximum Ambient Temp:.....104°F.(40°C).
 Maximum Pressure:.....Refer to Name Plate.
 Pump Housing:.....Chemical Resistant Resin.

Materials of Construction

Pump Head:.....Chemical Resistant Resin.
 Pump Head Tubing: Special Approved Synthetic Rubber.
 Injection fitting:.....PVC.
 Strainer:.....Polypropylene.
 Suction / Discharge Tubing:.....Polyethylene.

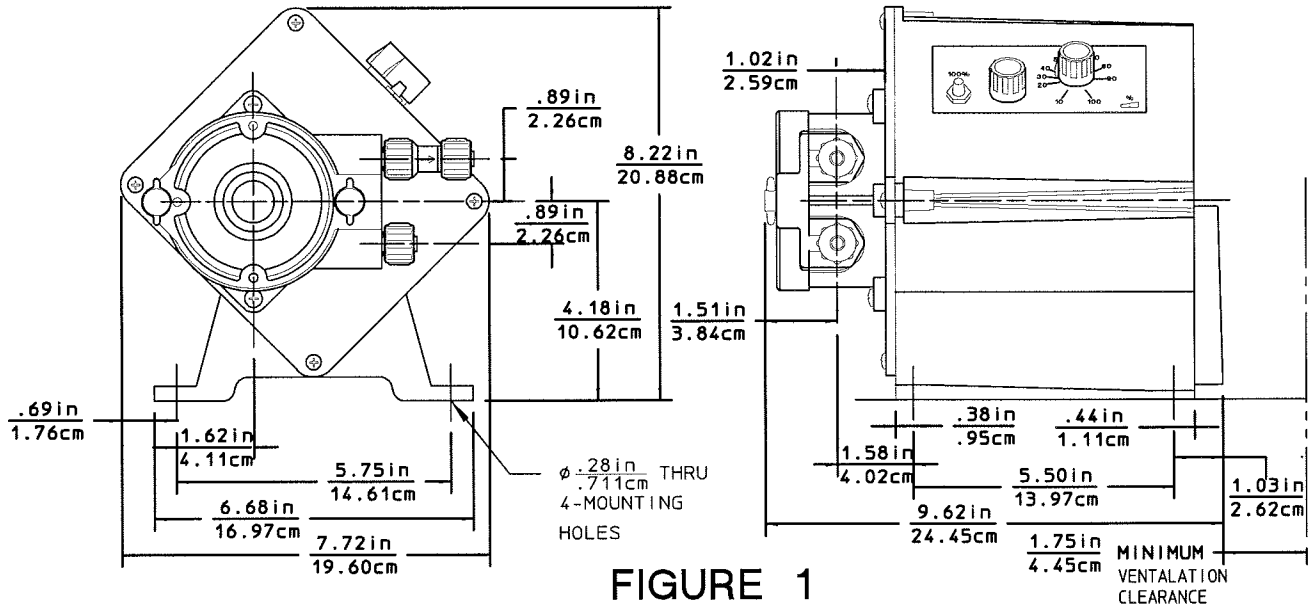

**FIGURE 1
 INSTALLATION**

NOTE: For pumps operating in swimming pool installations the pump is to be supplied by an isolating transformer or thru a residual current device(RCD).

- 1) Set the pump on a flat level surface that will support 50-lbs(22kg) and secure with four .25in(6mm) screws in the holes provided. The pump should be mounted with no less than 1.75in(44mm) of clearance around the fan vent on the rear of the pump. Locate the pump so there is direct access to the power cord plug.
- 2) Verify the electrical requirements for the pump as listed on the name plate and connect to an appropriate electrical source in compliance with local codes for the specific application.
- 3) Relieve system pressure and drain the piping run where the injection fitting is to be installed. See figure #2. **The injection fitting must not be installed in a dead end pipe or a deeply recessed tee. It should be installed so as to place the tip at the center of the fluid stream.** The injection fitting has .25in-NPT. threads. If necessary drill a .44in(11mm)-diameter hole and using care not to tap to deeply, tap for .25in-NPT.



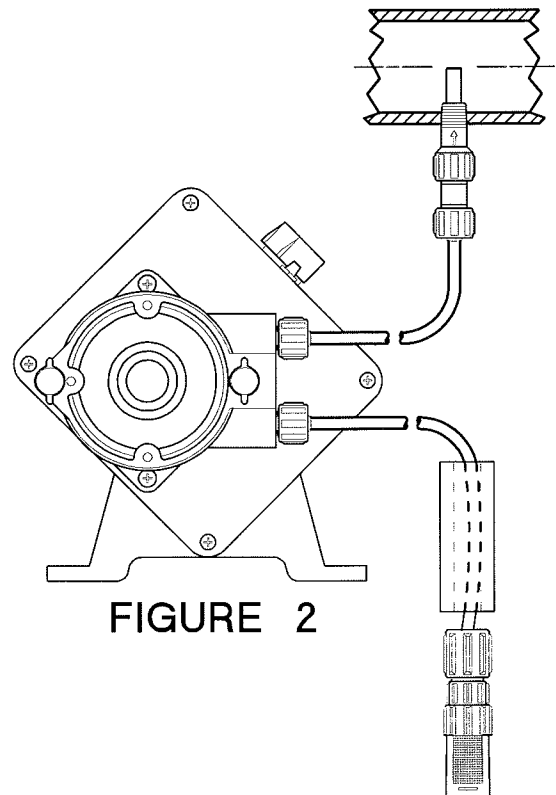


FIGURE 2

- 4) Apply Teflon tape to the injection fitting threads and install into piping system. **CAUTION:**
Inspect piping system and eliminate piping cross-connections to prevent feeding chemical to areas not needing treatment. Note: The fittings used on this pump are of a dual purpose design. Removal of the coupling nuts allows for the use of standard .25in-NPT fittings for hard piping or special tubing adaptors.

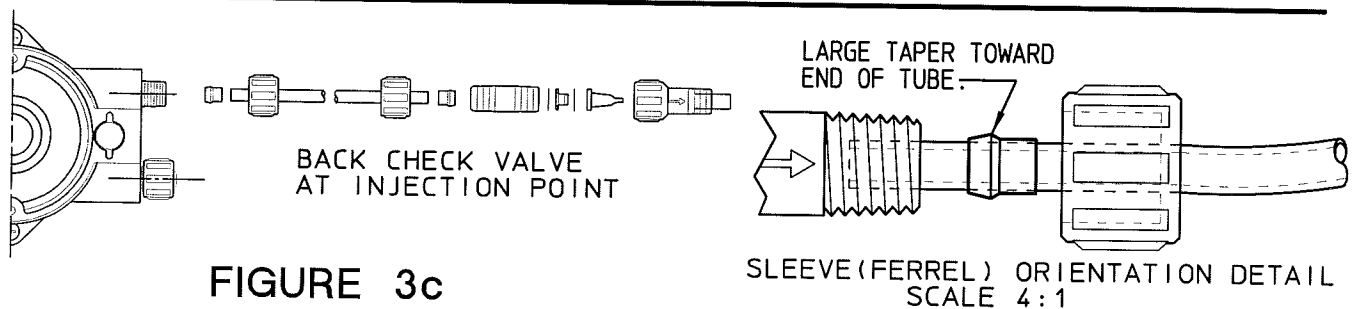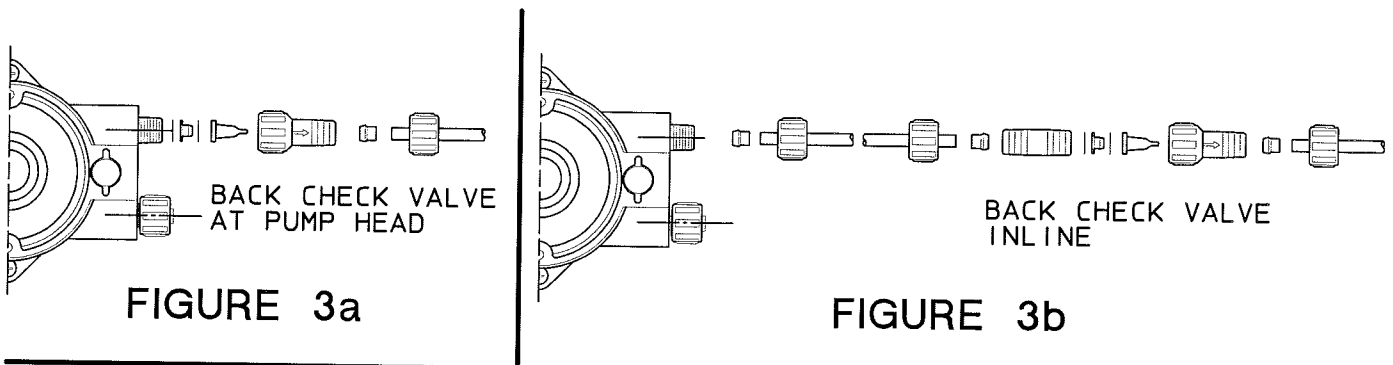

- 5) Referring to Figure #3a thru #3c, select the appropriate position for the back check valve location and assemble discharge tubing as shown between the discharge connection and injection fitting. To install tubing remove coupling nut and sleeve and slide onto tubing with the sleeve located .38in(9.5mm) from the tubing end. Place tubing into fitting and hand tighten the coupling nut.
Hand tighten only, do not use wrenches. For in line check valve location, do not insert the tube more than .38in into the valve body.

- 6) Referring to Figure #4 slide ceramic strainer weight on suction tubing first then remove the coupling nut from the strainer and slide onto tubing next. Push the end of the tubing onto the strainer and hand tighten the coupling nut.
Hand tighten only, do not use wrenches. Note: Immerse tubing in hot water to soften prior to pushing on fitting.

- 7) Install the strainer so it is off the bottom of the chemical container(1-2in(25-50mm)) and measure suction tubing length required. Cut tubing ends square and install on suction fitting of the pump. **Hand tighten only, do not use wrenches.**


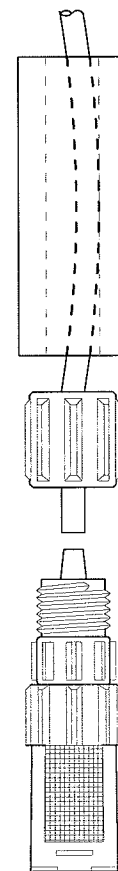


FIGURE 4

OPERATION

The control panel located on the top of the housing is used to set and display the current feed rate. Located on the control panel are a momentary push button and two rotary knobs. These are used to prime the pump, place the pump in a standby mode, and adjust the flow rate.

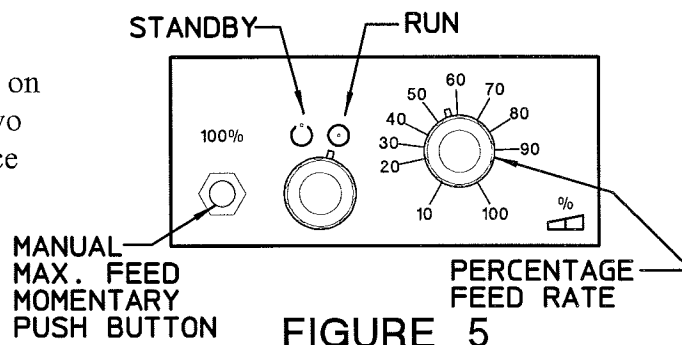

CONTROL PANEL OPERATION

Priming the Pump: Depressing the 100% button allows the user to run the pump at 100% output regardless of the feed rate setting. This is a momentary contact switch which operates only when the button is depressed. Once the button is released the pump returns to the set feed rate.

Standby Mode: Rotating the standby knob counterclockwise places the pump in the standby mode. Use the standby mode along with the 100% button to jog the pump during tubing replacement as discussed later. To return to the run mode rotate the standby knob clockwise. **⚠️ WARNING:** This is not a power switch. The voltage to the pump is not interrupted and circuits inside the housing are still live.

Adjusting Feed Rate: To adjust the pump output, rotate the feed rate knob to align the pointer with the desired flow from 10 to 100%.

⚠️ DANGER: DO NOT ATTEMPT TO FEED CHEMICALS WITHOUT FIRST CONSULTING YOUR CHEMICAL FEEDER DEALER OR CHEMICAL SUPPLIER. To avoid running out of chemical, follow a regular schedule of monitoring chemical supply.

⚠️ CAUTION: Inspect peristaltic tubing frequently and replace when deterioration becomes apparent. Peristaltic tubing will eventually wear and break if neglected. This occurrence will cause chemical spillage and a potential for personal injury or damage to equipment. **Always refer to chemical manufacturers' recommendations with regards to safety and handling of hazardous or corrosive chemicals.** Always wear protective clothing and safety glasses when working near chemical feed systems.

⚠️ WARNING: Do not expose the pump or tubing to pressure exceeding the pressure rating on the pump nameplate.

- 1) Make sure the power is on and the pump is in standby mode.
- 2) Fill the chemical tank with the chemical to be fed.
- 3) Depress and hold the 100% button until the chemical is present in the discharge line.
- 4) Rotate the standby knob to the run setting and adjust the feed rate knob to the desired setting.

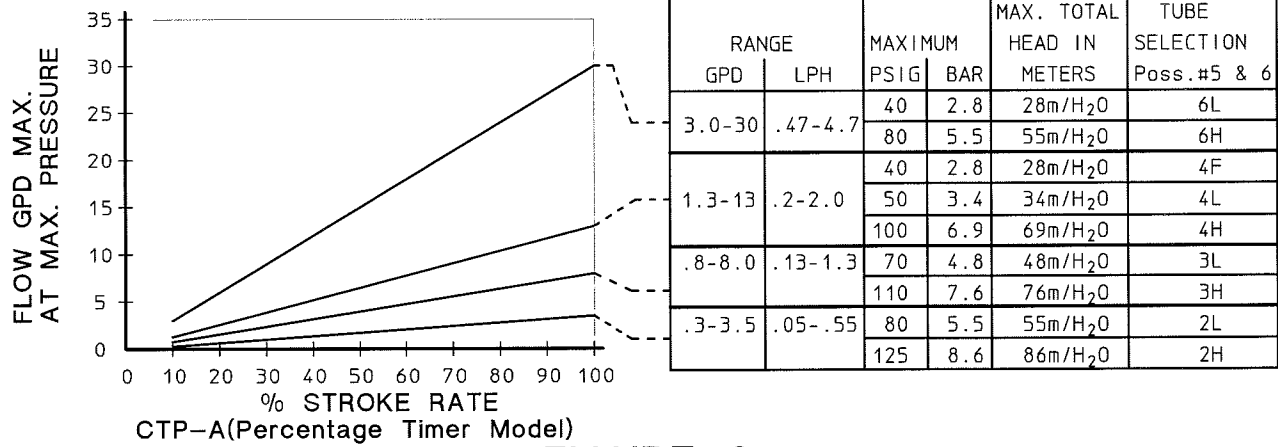


FIGURE 6

MAINTENANCE

NOTE : To get actual feed rates for specific settings, actual output must be verified by measuring volume output. Use the flow chart Figure #6, as a guide. To get the actual feed rate for specific settings, each pump must be calibrated for its flow. As with any peristaltic pump output varies with pressure and tubing condition. It is recommended that feed rates be verified at every tubing change and after every 250-hour. **More critical applications require more frequent verification.**

NOTE: NO USER SERVICEABLE COMPONENTS INSIDE ENCLOSURE. SHOULD THE POWER SUPPLY CORD BECOME DAMAGED, IT MUST BE REPLACED BY PULSAFEEDER OR IT'S REPRESENTATIVES or A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

Tubing Assembly Removal.

Always wear protective clothing and safety glasses when working on the chemical pump and refer to chemical manufacturers' safety precautions.

- 1) Remove the power to the pump and place in the standby mode.
- 2) Relieve system pressure and drain discharge and suction tubing
- 3) Loosen coupling nuts and remove the tubing from suction and discharge ports. See figure #7a.
- 4) Remove the back check valve from the discharge port if it is located there.
- 5) Remove the two thumb screws holding on the pump head cover and remove.

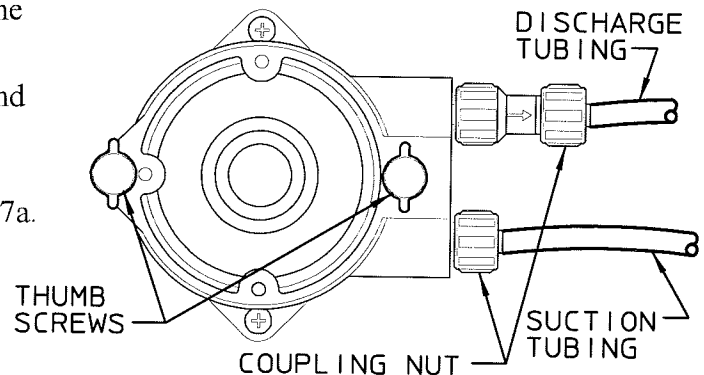


FIGURE 7a

- 6) Remove pump head tube assembly by removing both connector fittings and pulling tubing straight out of the pump head. See figure #7b. **CAUTION: Tubing may retain a small amount of chemical.** If the rotor assembly is removed, go to step #8.
- 7) Remove rotor assembly by pulling straight out of pump head. **NOTE bearing lubrication every 500-hours, see next section, Tubing As'y Installation.**
- 8) Clean any tubing debris from the rotor assembly and pump head.

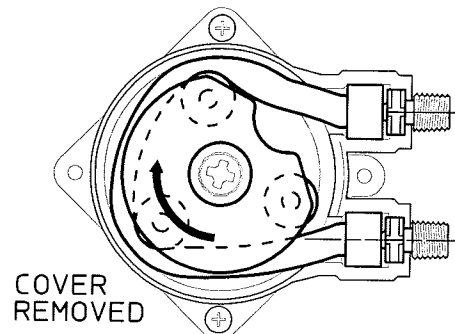


FIGURE 7b

Tubing Assembly Installation and Lubrication:

Note : In general tubing assemblies may be loaded using the 100% button as described in steps #1 thru #7. If any difficulty is encountered, go to step #8.

⚠ WARNING : When using the pump to load tubing the unit must be in the standby mode to prevent accidental motor starting. Caution must be used to keep fingers away from rotating parts.

NOTE: Lubrication of rotor assembly (IT.#21) should be performed every 500-hours (typical service interval may be 30 to 90-days depending on frequency of use). Clean front and rear rotor bearings and surfaces with a clean shop cloth (see lube (IT.#62) area in assembly drawings on pg.#11). Lubricate with a PTFE (Teflon®) thickened, medium viscosity, synthetic grease intended for plastic parts. Ref. Grease Kit (IT.#62) pt.#J30257.

- 1) Reinstall the rotor assembly by aligning the cross in the rotor to the drive shaft cross and fully insert into pump head.
- 2) Use the 100% button and align the rotor assembly as shown in Figure #8a.
- 3) Insert one connector end of the tubing assembly into the bottom retaining slot in the pump head. Insert the tube thru the guide slot in the rotor. Using **caution** depress the 100% button and feed the tube around the pump head as the guide slot rotates. When the rotor is positioned as in Figure #8c release the 100% button. Insert the other connector into its retaining slot. Note: A helpful hint, use of the back check valve assembly (as a handle on head tubing assembly) may assist in final installation of head tubing.
- 4) Align the pump head cover bearing bore with the rotor shaft and press into place.
- 5) Loosely reinstall the two thumb screws.
- 6) Using the 100% button, run the pump for several revolutions and then fully tighten the thumb screws hand tight.
- 7) Return the pump to service by following the procedures in the installation section.

Manual Tube Installation

- 8) Use the 100% button and align the rotor assembly as shown in Figure #8a.
- 9) Insert one connector end of the tubing assembly into the bottom retaining slot in the pump head. Insert the tube thru the guide slot in the rotor.
- 10) Insert the tubing insertion tool (part #NC990000-000 purchased separately) into the rotor cross slot and align the tubing guide slot. Using the tool rotate the rotor to feed the tube around the pump head until the rotor is positioned as in Figure #8c. Remove the tool and insert the other connector into the top retaining slot.
- 11) Go back to steps #4 thru #7 to complete the installation.

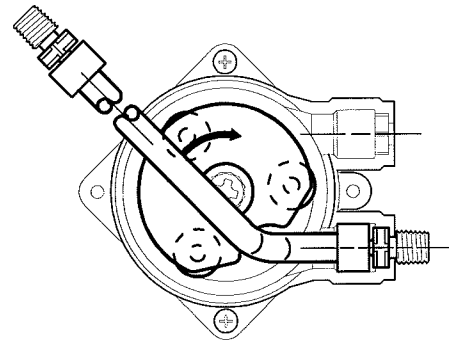


FIGURE 8a

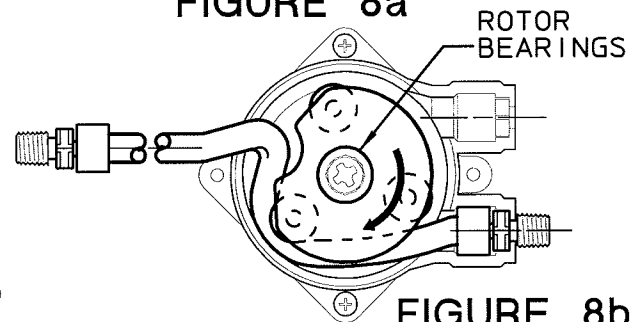


FIGURE 8b

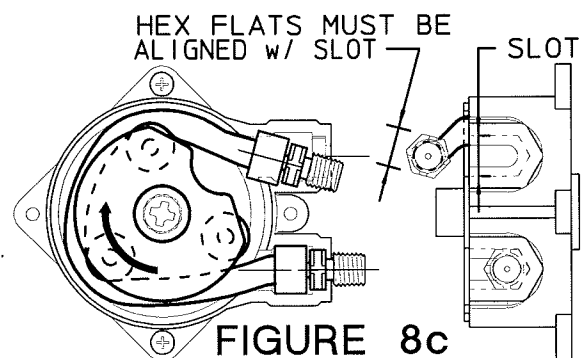


FIGURE 8c


Pumps carrying the 'ETL Sanitation'(tested to NSF Standard-50) marks are listed for swimming pools, spas and hot tubs, and when proper materials are selected, are capable of handling but not limited to the following chemical solutions:

- | | |
|----------------------------|------------------------|
| 12% ALUMINUM SULPHATE, | 5% SODIUM CARBONATE, |
| 2% CALCIUM HYPOCHLORITE, | 10% SODIUM HYDROXIDE, |
| 12.5% SODIUM HYPOCHLORITE, | 10% HYDROCHLORIC ACID. |

To meet the requirements of the 'ETL Sanitation Mark' qualification, perform the following at intervals of 500-hours operation time(actual running time):.


1. Replace the peristaltic tubing assembly as described above. Grease the rotor bearing and oil the three rotor rollers.
2. Remove the pump from the housing panel. Disconnect the panel from the housing and withdraw. Remove the gearmotor from the panel, then remove the gearmotor cover. Using a screwdriver or similar implement, redistribute grease within the gearbox as necessary to the vicinity of the gear and pinion teeth. Reassemble by reversing the above disassembly process.

**WIRING DIAGRAM
CTP-A(ac Gearmotor)**

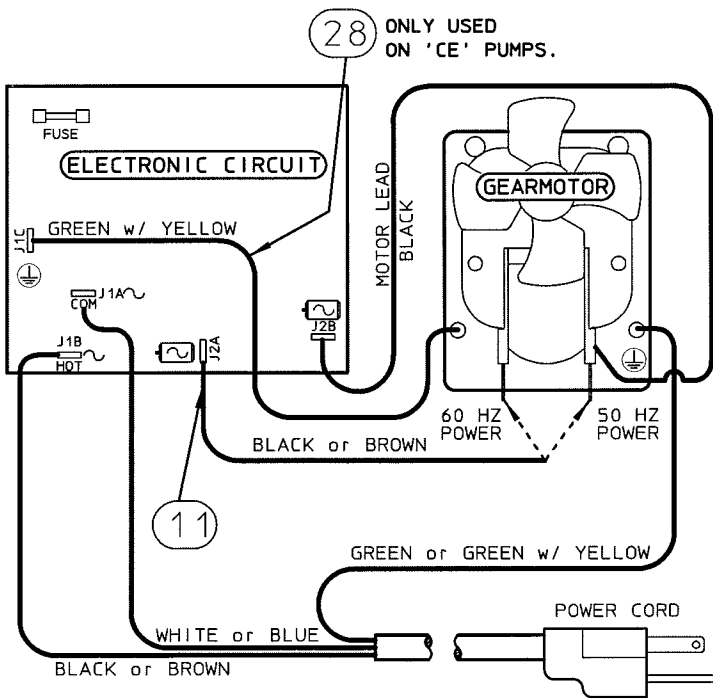

US COLOR CODE	EURO COLOR CODE
BLACK = LINE	BROWN = LINE
WHITE = NEUTRAL	BLUE = NEUTRAL
GREEN = EARTH (GROUND)	GREEN w/ YELLOW = EARTH (GROUND)

**WIRING DIAGRAM
CTP-A(ac Gearmotor) With TIMER**

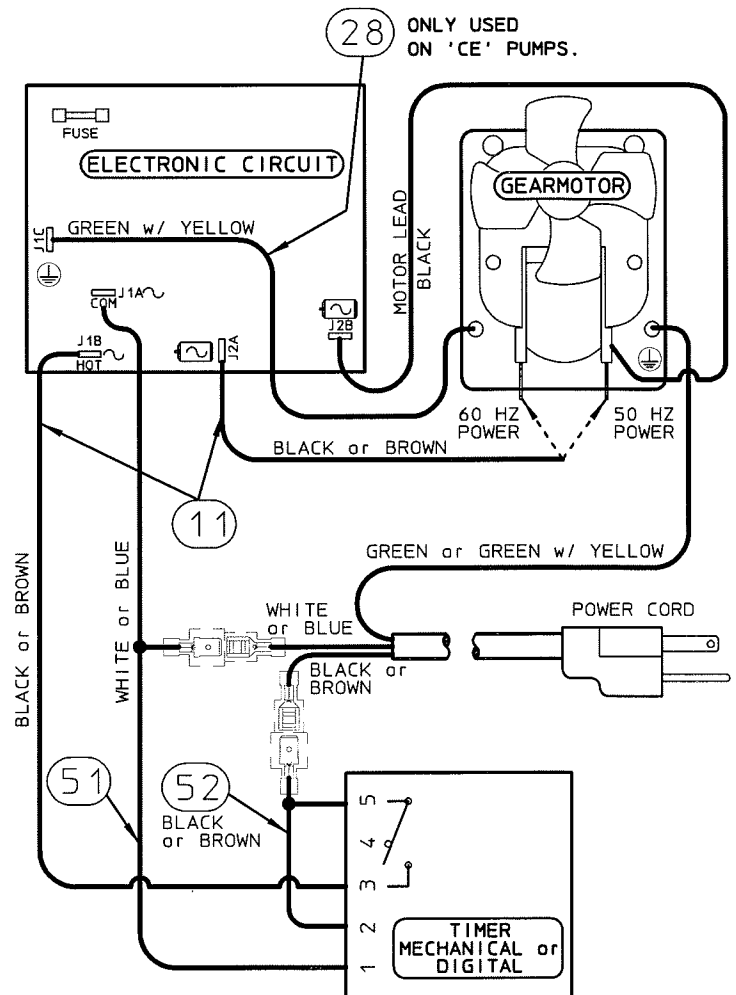

Policies and Procedures

Manufacturers Product Warranty(Standard Electronic Controls / Metering Pumps)

PULSAFEEDER warrants equipment of its manufacture to be free of defects in material or workmanship. Liability under this policy extends for 12-months from the date of start-up or 18-months from date of shipment, whichever comes first. The manufacturer's liability is limited to repair or replacement of any failed equipment or part which is proven defective in material or workmanship upon manufacturers examination. This warranty does not include removal or installation costs and in no event shall the manufacturers liabilities exceed the selling price of such equipment or part.

The manufacturer disclaims all liability for damage to its products through improper use, installation, maintenance or attempts to operate such products beyond their functional capacity, intentionally or otherwise, or any unauthorized repair. Replaceable elastomeric parts, including peristaltic tubing, are expendable and are not covered by any warranty either expressed or implied. The manufacturer is not responsible for consequential or other damages, injuries or expense incurred through the use of its products.

The above warranty is in lieu of any other warranty, either expressed or implied. The manufacturer makes no warranty of fitness or merchantability. No agent of ours is authorized to provide any warranty other than the above.

For warranty and service matters within the European Union, contact the seller or:

PULSAFEEDER, INC.
STEIGAR 24
NL 1351 AB ALMERE
NETHERLANDS

RETURNS

The Customer Service Department will issue a Return Authorization(RA) number for all returns.


The following information will be required:

1. Billing and a ship-to address.
2. Model and serial number.
3. Contact name and phone number.
4. Reason for return.
5. Purchase order(where applicable).
6. RA number on outside of the carton.


All material must be returned freight prepaid. All merchandise must be properly packaged and free of any corrosive, toxic or otherwise hazardous chemical. All items returned must reference Return Authorization number.

CREDITS

No equipment will be accepted beyond six months after date of shipment from the factory. Only unused and undamaged equipment will be accepted for return to stock. All credits are based on acceptance of materials as new and unused by our inspection personnel. A restocking fee will apply. All equipment returned for credit must have a RA number and be returned freight prepaid.

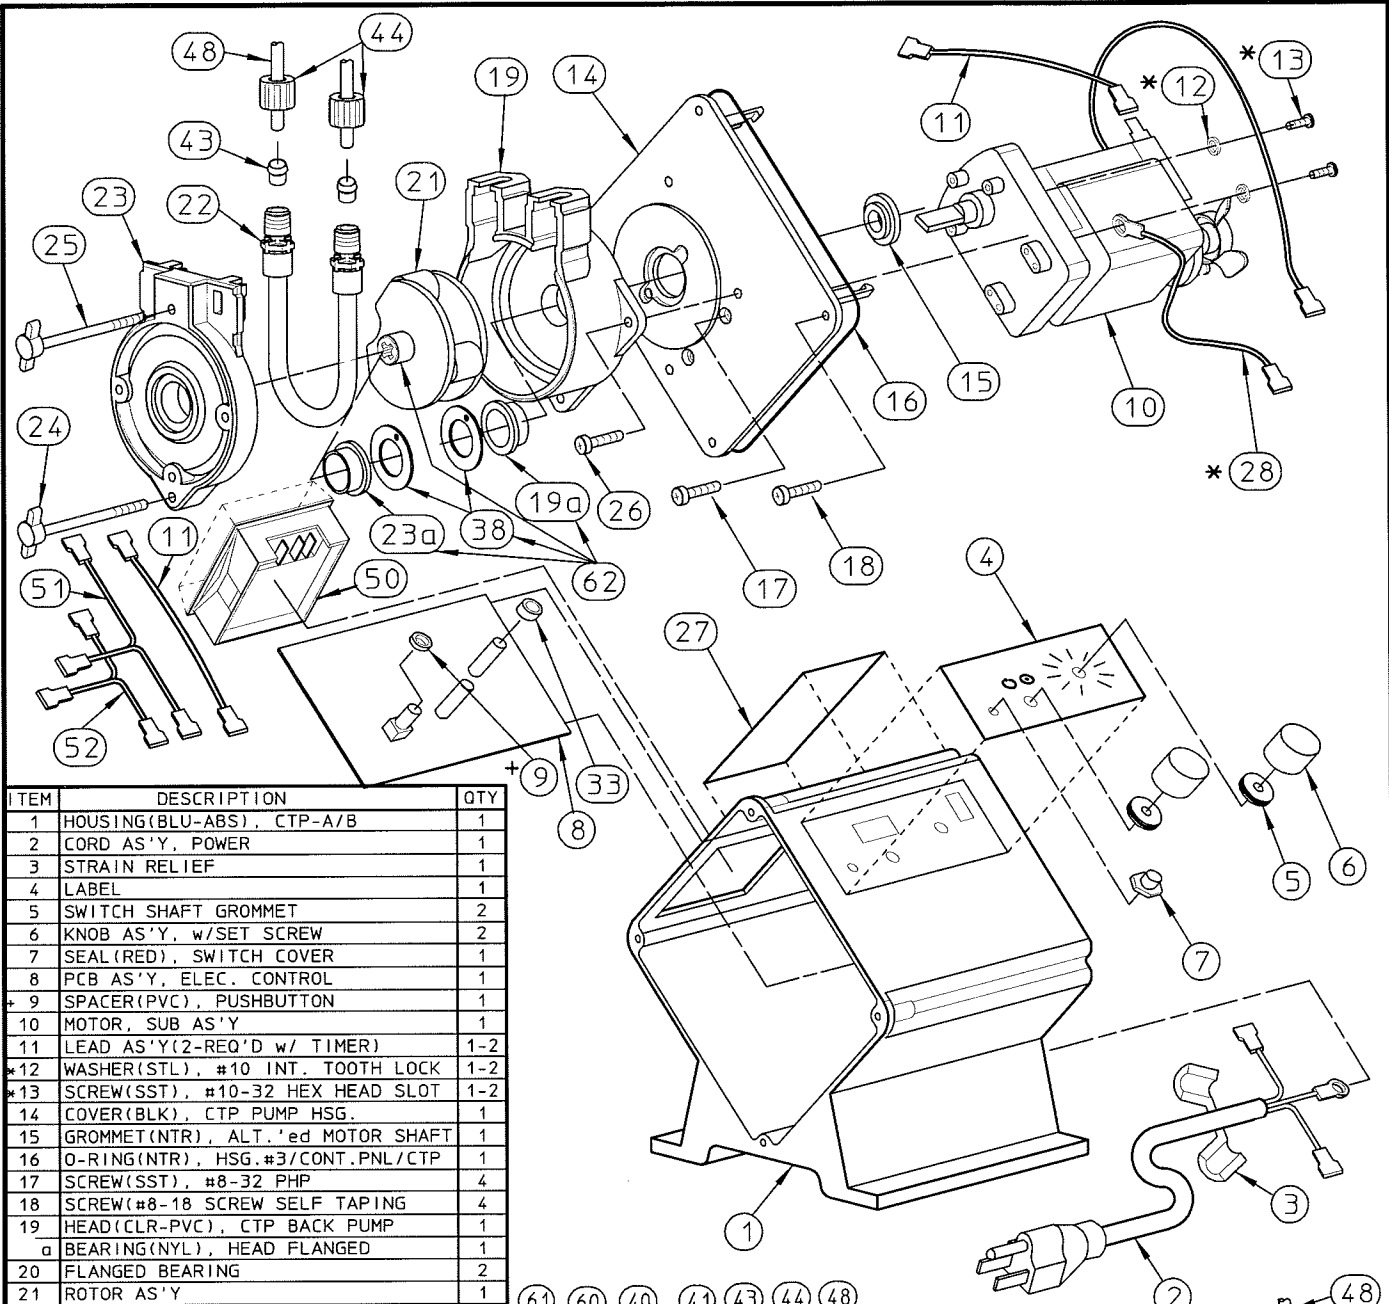

ITEM	DESCRIPTION	QTY
1	HOUSING(BLU-ABS), CTP-A/B	1
2	CORD AS'Y, POWER	1
3	STRAIN RELIEF	1
4	LABEL	1
5	SWITCH SHAFT GROMMET	2
6	KNOB AS'Y, w/SET SCREW	2
7	SEAL(RED), SWITCH COVER	1
8	PCB AS'Y, ELEC. CONTROL	1
+ 9	SPACER(PVC), PUSHBUTTON	1
10	MOTOR, SUB AS'Y	1
11	LEAD AS'Y(2-REQ'D w/ TIMER)	1-2
*12	WASHER(STL), #10 INT. TOOTH LOCK	1-2
*13	SCREW(SST), #10-32 HEX HEAD SLOT	1-2
14	COVER(BLK), CTP PUMP HSG.	1
15	GROMMET(NTR), ALT. ed MOTOR SHAFT	1
16	O-RING(NTR), HSG.#3/CONT.PNL/CTP	1
17	SCREW(SST), #8-32 PHP	4
18	SCREW(#8-18 SCREW SELF TAPING	4
19	HEAD(CLR-PVC), CTP BACK PUMP	1
a	BEARING(NYL), HEAD FLANGED	1
20	FLANGED BEARING	2
21	ROTOR AS'Y	1
22	HEAD TUBE AS'Y	1
23	HEAD(CLR-PVC), CTP FRONT PUMP	1
a	BEARING(NYL), HEAD FLANGED	1
24	THUMB KNOB	2
25	SCREW, #10-32 SOCKET HEAD	2
26	SCREW, #10-32 SCREW PAN HEAD	2
27	LABEL, DATA	1
*28	LEAD AS'Y, GREEN w/ YELLOW GROUND	1
33	SPACER(NYL), POT	1
38	WASHER(NYL), HD BRG THRUST	2
ACCESSORIES LIST		
40	VALVE(DUCK BILL)	1
41	VALVE BODY	1
43	COMPRESSION FERREL	4
44	COUPLING NUT	4
45	CLOSE NIPPLE SPECIAL	1
46	INJECTION BODY	1
47	STRAINER	1
48	TUBING AS'Y, 15-ft.	1
60	INSERT, DUCK-BILL	1
61	GASKET, DUCK-BILL	2
62	KIT, CTP MAINTENANCE GREASE(10oz)	REF
TIMER OPTION		
50	TIMER	1
51	LEAD AS'Y, WHITE or BLUE	1
52	LEAD AS'Y, BLACK or BROWN	1

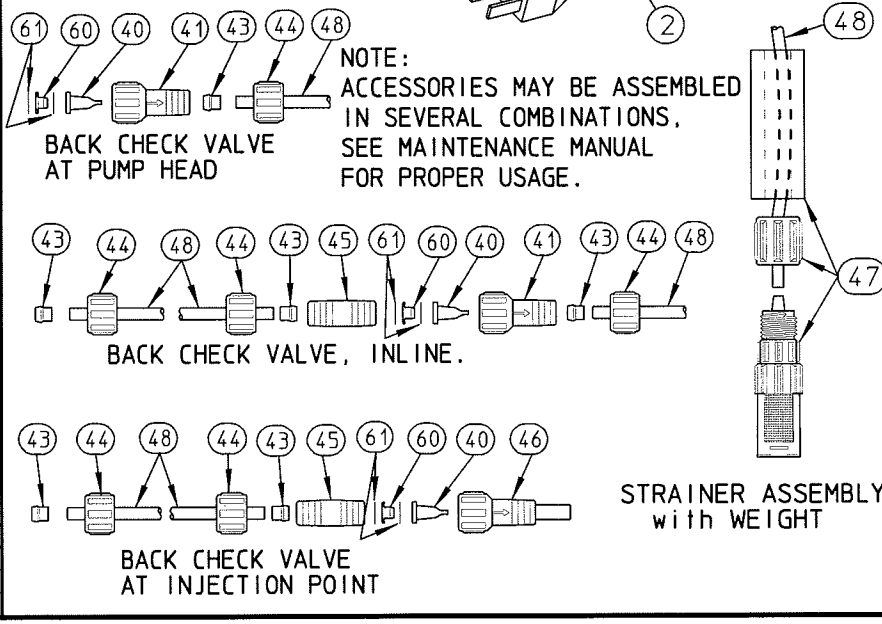

NOTE:
ACCESSORIES MAY BE ASSEMBLED
IN SEVERAL COMBINATIONS.
SEE MAINTENANCE MANUAL
FOR PROPER USAGE.

* = ONLY USED ON 'CE' APPROVED PRODUCT.
+ = NOT USED ON 'CE' PRODUCT.

